


How to Change an RO Filter and Membranes (Purionics or 3M SQC Easy-Twist)

2. Diagram of Connection

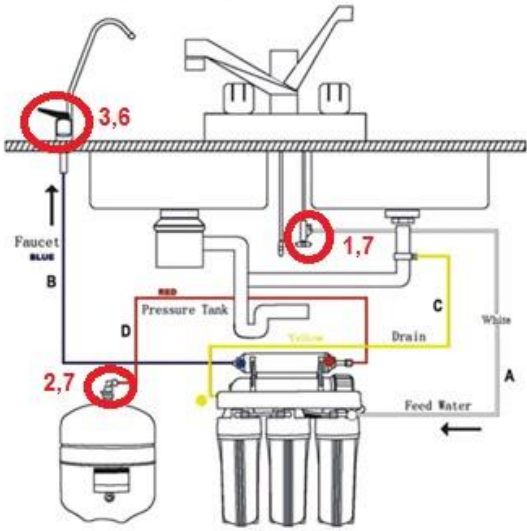

1. Turn off the incoming water supply line valve to the RO system.
2. Close the blue ball valve on the top of RO storage tank by turning 90 degrees clockwise.
3. Turn on the RO faucet, and relieve pressure from the system, and ensure no water comes out.
4. Unscrew and remove the used filter(s).



5. Screw new filter(s) on, using your hands to tighten only
6. Turn off the RO faucet.
7. Turn on the incoming water supply valve and RO tank valve.



** To replace membrane, press the smallest ring attached to the tubing while pulling the tubing out. Insert existing tubing to the new membrane.